

PA768 Gun Grip



Quick Start Guide

V1.0

▶ Package

Please make sure the following contents are in the PA768 Gun Grip gift box. If something is missing or damaged, please contact your Unitech representative.

▶ The Package Content

- PA768 Gun Grip
- Wrist Strap

▶ Getting Start


Please remove the following items from PA768 before using.

1. The Bottom Bumper




▶ Getting Start (Continued)

2. The black mylar on the pogo pin (for gun grip)

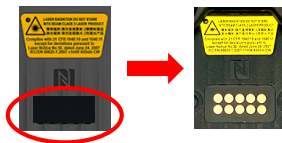

▶ Pogo Pin on PA768/Gun Grip

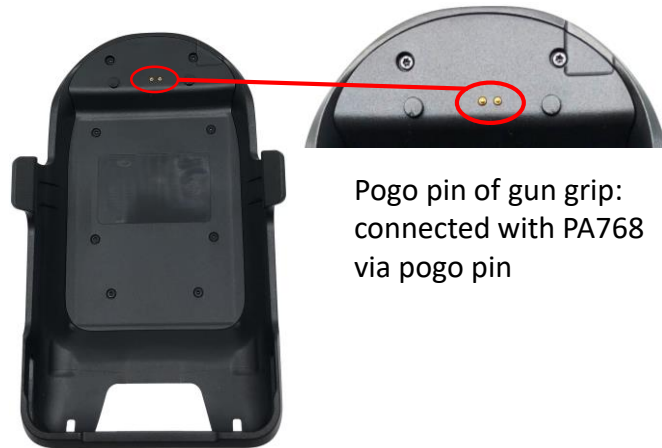

Pogo pin of gun grip:
connected with PA768
via pogo pin

3. The hand strap and fixed arm



Pogo pin for gun grip

▶ Assemble with Terminal

1. Align PA768 with the gun grip and insert from about 45 degree angle.



2. Press down PA768 until you hear a click sound. Make sure there is no gap between PA768 and the gun grip.



▶ Disassemble with Terminal

Grab two protrusions on both sides of gun grip, and bent outward while pushing PA768 upward, then you can remove it from the gun grip.



WARNING!

There is a risk of fire and burns if the battery is handled improperly. DO NOT disassemble, crush, puncture, short external contacts, or dispose the battery pack in fire or water. DO NOT attempt to open or service the battery. Dispose used batteries according to local recycling guidelines in your area.

CAUTION!

To ensure the unit working properly, please keep all connectors away from the contaminants such as dust, grease, mud, and water. Negligence may cause the unit to lose communication, short circuit, or overheated. If the connector is damaged, please ensure the connector is fully repaired before using the unit to avoid short circuiting.

Copyright 2023 Unitech Electronics Co., Ltd. All rights reserved.
Unitech is a registered trademark of Unitech Electronics Co., Ltd.



<http://www.ute.com/>